


Bluetooth pairing APP with your Android Device

Bluetooth pairing


Turn on Bluetooth on your device and make it discoverable.
On the CPS-Trans I go to MENU - CONFIGURATION
and enter the password 1234

Activate Bluetooth communication (1)
Press SCAN (2)

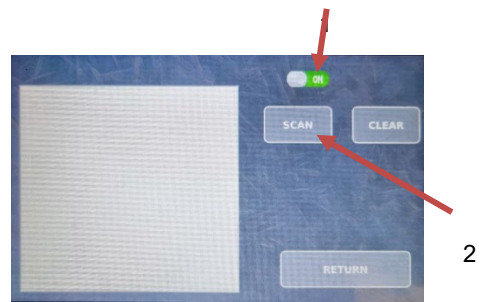


Wait for END SCAN to appear above the window.

The devices that can be paired appear in the window,
the devices that have already been paired in green
Select the device you want to pair
Press the PAIR button
The pairing request will appear on the device, accept it
Press RETURN to go home

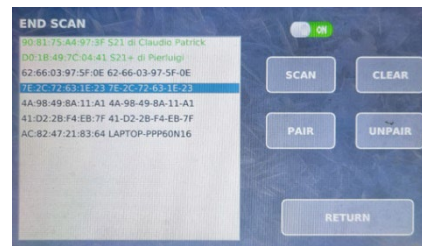

Configuration and operation of the App.

Launch the application on your device
Select Connection (1) at the bottom
Select the Bluetooth connection with which the AGA is connected (2)
Save the choice (SAVE)
Return to the main screen (3)
Restart App. and Aga
Press the start button (4)

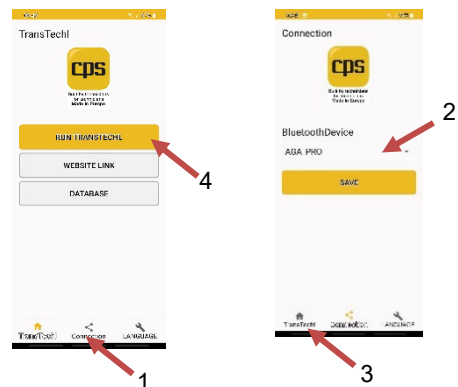

Press the connection button (5)

If everything has been configured correctly,
the connection will be made and the Bluetooth icon on the machine
will turn blue,
then the first screen of the automatic cycle
will appear both on the App and on the machine

